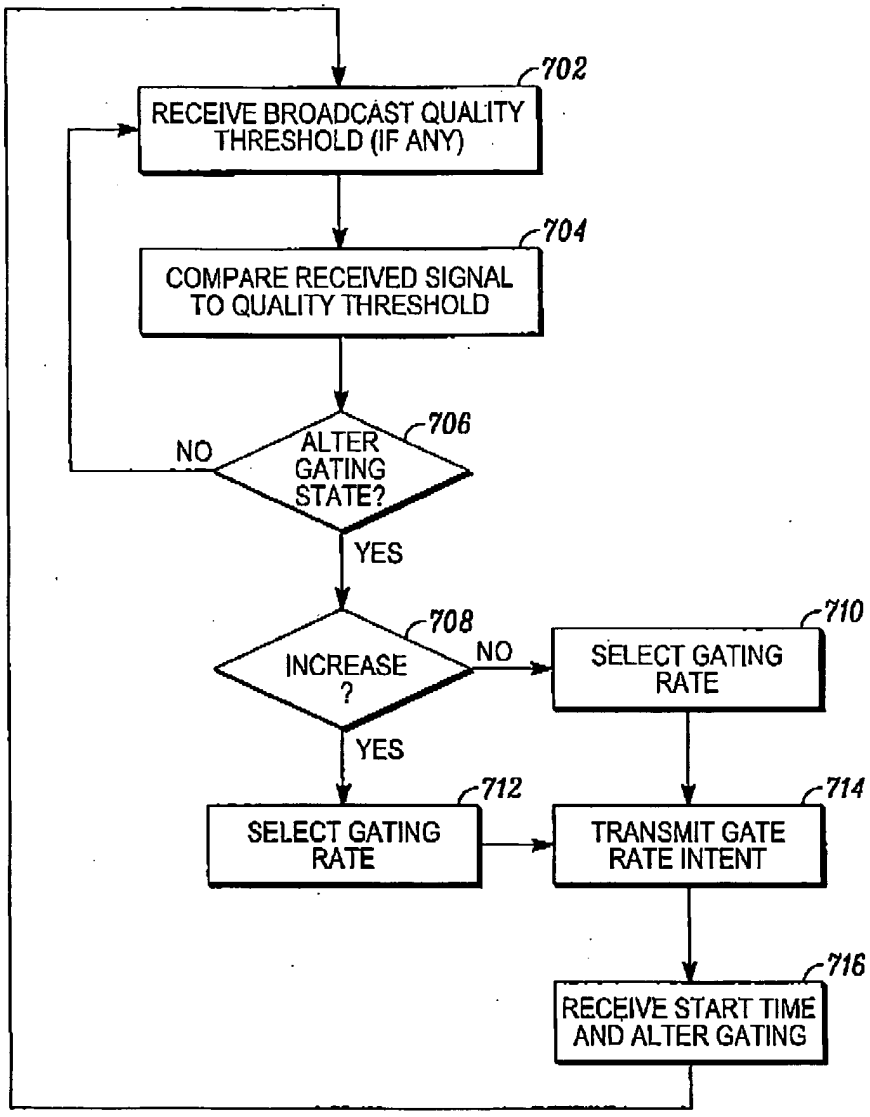
702
RECEIVE BROADCAST QUALITY THRESHOLD (IF ANY)
704
COMPARE RECEIVED SIGNAL TO QUALITY THRESHOLD
706
ALTER GATING STATE?
NO
YES
708
INCREASE ?
NO
YES
710
SELECT GATING RATE
712
SELECT GATING RATE
714
TRANSMIT GATE RATE INTENT
716
RECEIVE START TIME AND ALTER GATING

FIG. 7